


PARTY CANOPY

20x20


AT CORNERS:
ROPE OVER POLE
TIPS AT RIGHT
ANGLES

NOTE: ALL GUY ROPES MUST BE OVER POLE TIPS.


1. Spread out tent and ropes. Drive stakes 3 ft. out from edge of tent. Two at each corner, one at each side pole position.
2. Fasten ropes to stakes leaving looped end and about 7 ft. of slack.
3. Set up two piece side poles with tips through grommets. Angle poles at about 45°.
4. Set up center pole (larger diameter 4-piece). Be certain snap buttons are secured.
5. Push side poles to vertical. Adjust and tighten guy ropes.
6. Small diameter cord is attached to center rings and staked straight down.

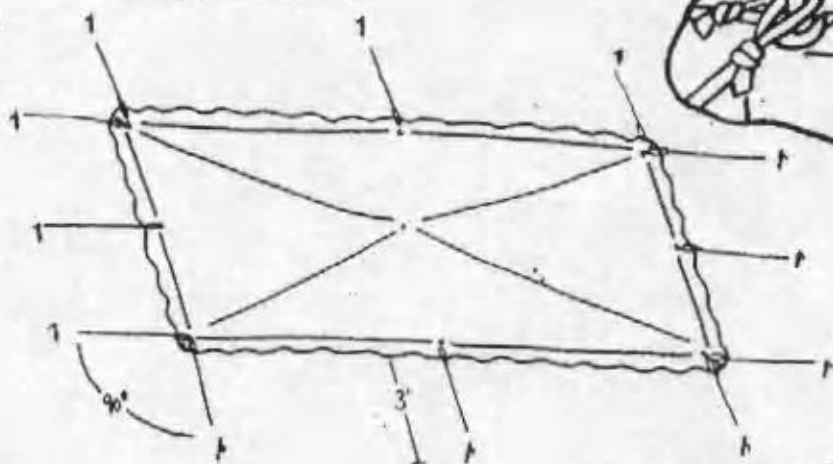

AT SIDES:
ROPE THROUGH
BUCKET
AND
OVER POLE
TIP

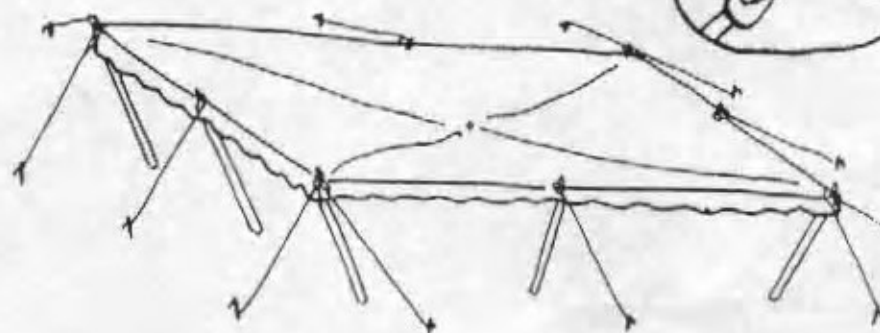

SLIDER
ATTACHED
TO ROPE

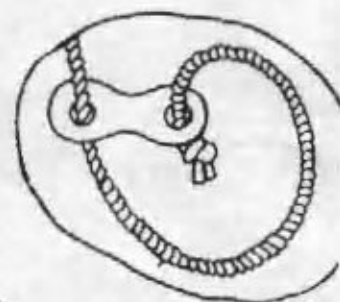

Parts List

- 1 center pole
- 8 side poles
- 13 stakes
- 12 ropes w/sliders

Eureka!
Party Tents