

FAMILIARIZING YOURSELF WITH THE CONTROLS

On the right side of the machine are the following switches and controls. (Figure 1)

Main Power ⚡

"0" Position: Off position. Power is turned off to all functions.

"I" Position: On position. Machine has power.

Display light 💡

"0" Position: Lights are off.

"I" Position: Lights are on. Display lights have power

Agitator Switch 🔄

"0" Position: Agitator is off.

"I" Position: Agitator is on.

Cooler Switch ❄️ / 🍷

"0" Position: Off position.

"I" Position: Cool drink mode. 🍷

"II" Position: Frozen mode. ❄️

Compressor green light 🟢

If the compressor green light is on, the compressor should be working

Automatic defrost / standby timer (Figure 2)

This timer will automatically switch your dispenser from the frozen drink to the chilled drink mode. This timer can be programmed to switch the machine at any time of the day or night. The standard settings are:

Switch to chilled from frozen - 11:00 PM

Switch to frozen from chilled - 9:00 AM

For all seven days of the week.

Find detailed programming instructions on page 13.

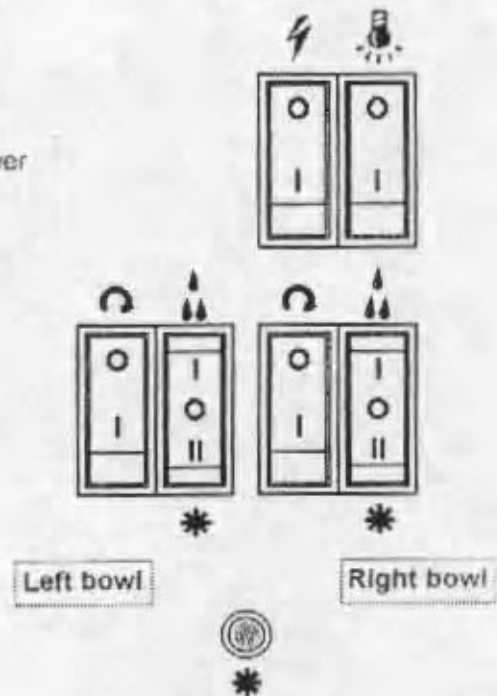


Figure 1

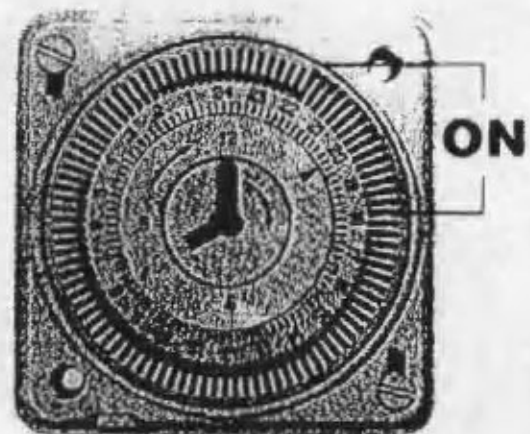


Figure 2

HOW TO OPERATE



1. The machines come from factory with a handle locking system (fig 9) (locker (3) not included).
To unlock, remove the locker and pull out the rod (1) (arrow A).
2. Once the bowl has been cleaned and sanitized, fill the mix tank with the desired liquid product (3 gallons maximum). Do not overfill the tank. NOTE THAT WHEN READY, SLUSH OCCUPIES MORE VOLUME THAN THE LIQUID (approximately 3.5 gallons of slush for 3 gallons of liquid).
3. If using natural products as a base (coffee, lemon juice, orange juice, etc.), it is required that 5 to 7 oz. of sugar per gallon be added. If using a concentrate, follow the mixing instructions from the supplier. In general the mix ratio (sugar content) of the product solution (liquid mix) should not be less than 11.

4. To access to switches and timer, open the switch panel cover by pushing on the side (arrow A) and pulling (arrow A') (Fig. 10).
To close the cover (arrow B'), push on the front (arrow B) until the clear plastic part (1) snaps closed (Fig. 11).

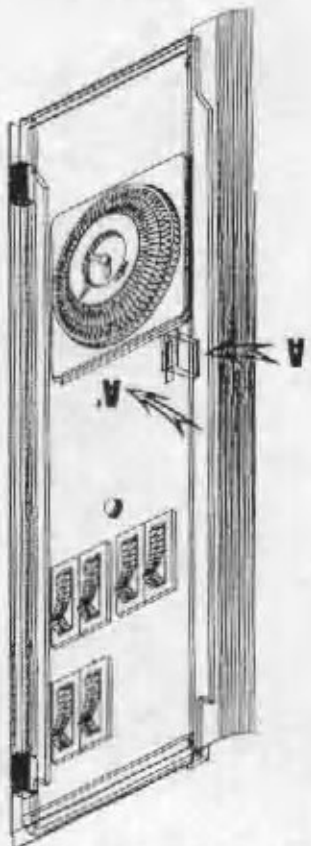


Figure 10

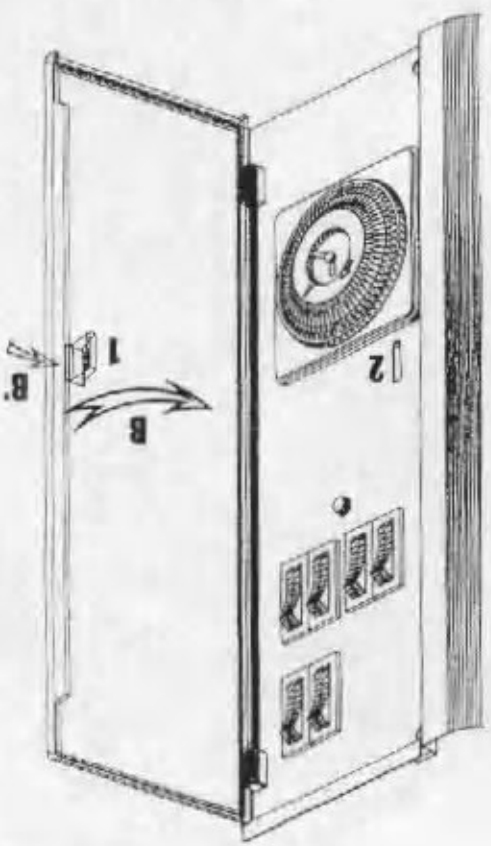


Figure 11

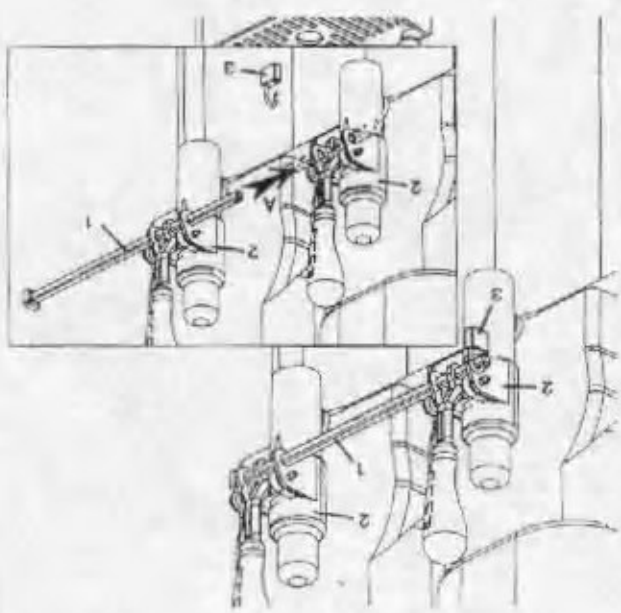


Figure 9

HOW TO OPERATE (cont'd)

4. To operate, press main power switch and agitator switch to ON position (Figure 12). **NOTE:** The agitator switch must be to ON position before setting to liquid or slush mode.

4.1 For slush, press the cooler switch to bottom position (II / *).

- 4.2 For liquid, press the cooler switch to up position (I / ↑). If the machine is being used as a liquid cooler, it is provided with an inside thermostat for controlling the liquid temperature.

Note that your machine is equipped with a time delay relay that provides for a four minute delay from the time of the initial start. This is to prevent the compressor from short cycling. Once the compressor is ON, the green light will be on.

Note: The cooler switch is a three position switch and in order to have the compressor off, all the cooler switches need to be in the middle position.

5. To illuminate the mix tank cover display on top of the unit and the product in the bowl press the display light switch to down position (I / ↓).

CAUTION: IF THE MACHINE IS STOPPED AT NIGHT WITH ICE IN THE TANK, REMOVE ALL ICE SLABS BEFORE STARTING.

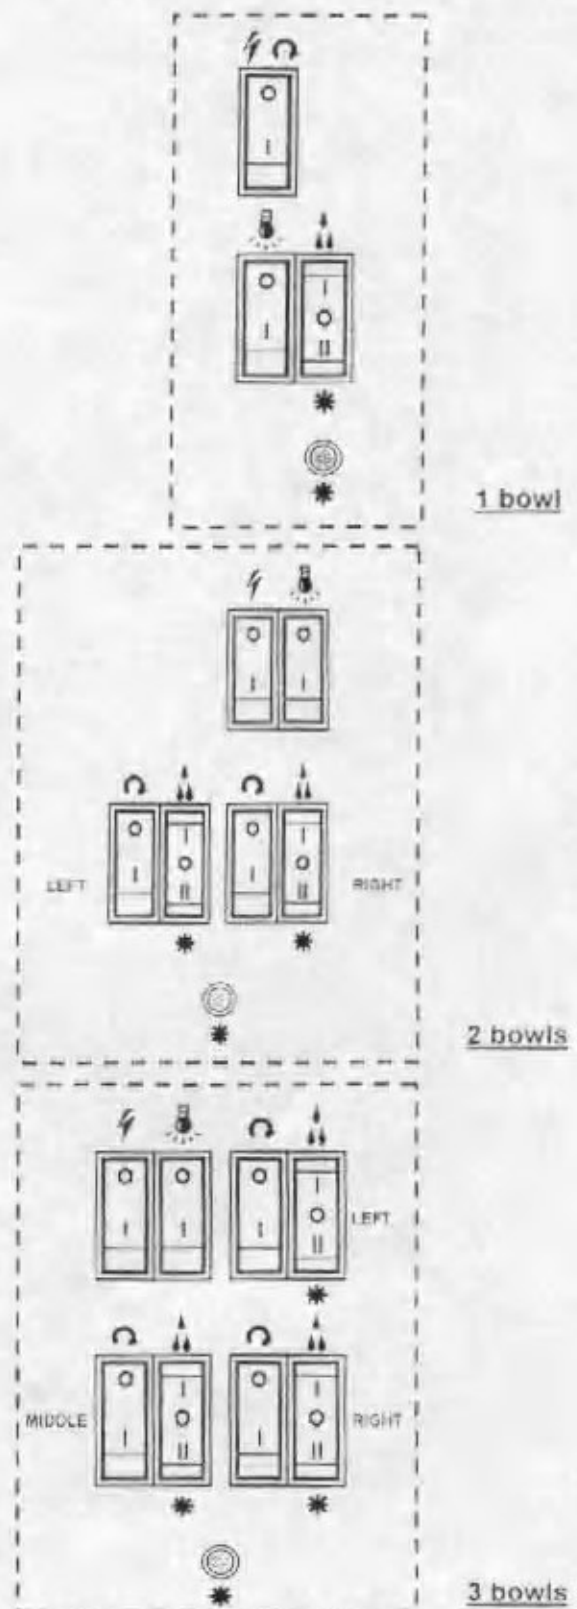


Figure 12